

ISO 9001 CERTIFIED COMPANY

SAFETY VALVE

C € 1128

SERIES # 033

DESIGN FEATURES

- SAFETY VALVE MANUFACTURED IN ACCORDANCE WITH REQUIREMENT OF ASME SECTION VIII DIVISION.1-PTC25. API 527, EN ISO 4126 PART 1, IS 12992
- DIRECT SPRING OPERATED, FULL LIFT, FULL NOZZLE, SINGLE TRIM & HIGH CAPACITY DESIGN
- FIXED BLOW DOWN, OVER PRESSURE 10% & NO MAINTENANCE DESIGN
- AVAILABLE IN METAL SEAT & VITON **RUBBER SEAT**
- BEST USE IN GAS LINE, RECIPROCATING & SCREW COMPRESSORS SYSTEM, PRESSURE VESSEL, AIR RECEIVER TANK, PRESSURE REGULATING SYSTEM, ETC.
- FULL NON FERROUS MATERIAL CONSTRUCTION.

TECHNICAL DATA: -

- SIZES: 1/2" X 1/2" TO 1" X 1-1/2"" (ORIFICE "D", "E" & "F")
- END CONNECTION: THREAD END (BSP. BSPT. NPT)
- SET PRESSURE RANGE: 1BARG TO 35BARG
- TEMPERATURE RANGE: -20*C TO 200*C
- APPLICATION: AIR. GAS. & WATER



HARSHAD ENGINEERING WORKS

WORK & OFFICE ADDRESS: -S-120 TO S-125, VIVEKANAND INDUSTRIAL ESTAE, NEAR RAKHIAL CROSS ROAD, RAKHIAL, AHMEDABAD - 380 023. GUJARAT, INDIA.

:+91-9879355077, 9825035792 **PH** #

: www.hewvalve.com


EMAIL : hew@hewvalve.com WEB 1

WEB 2 : www.hewsafetyvalves.com




SERIES # 033

G.A.DRAWING

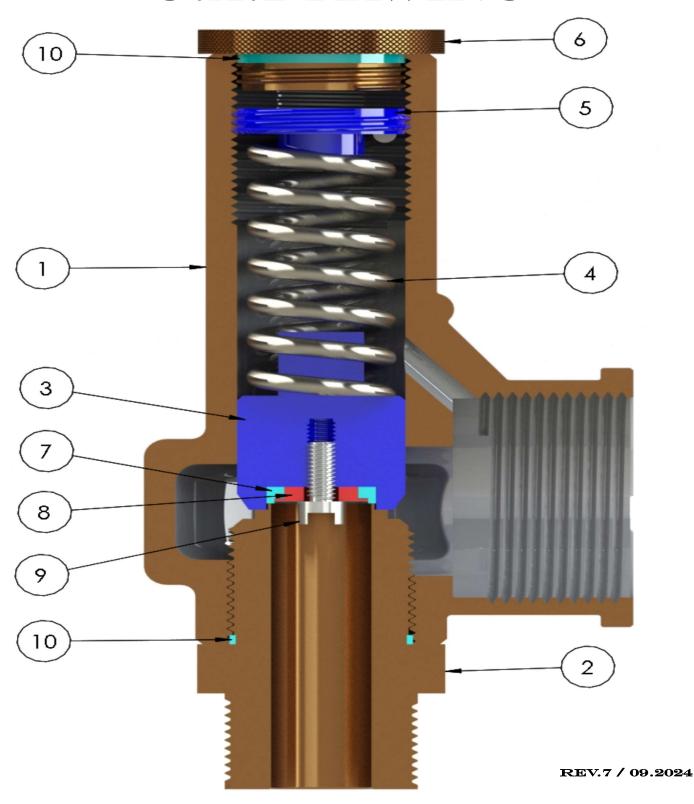



SERIES # 033 DIMENSION

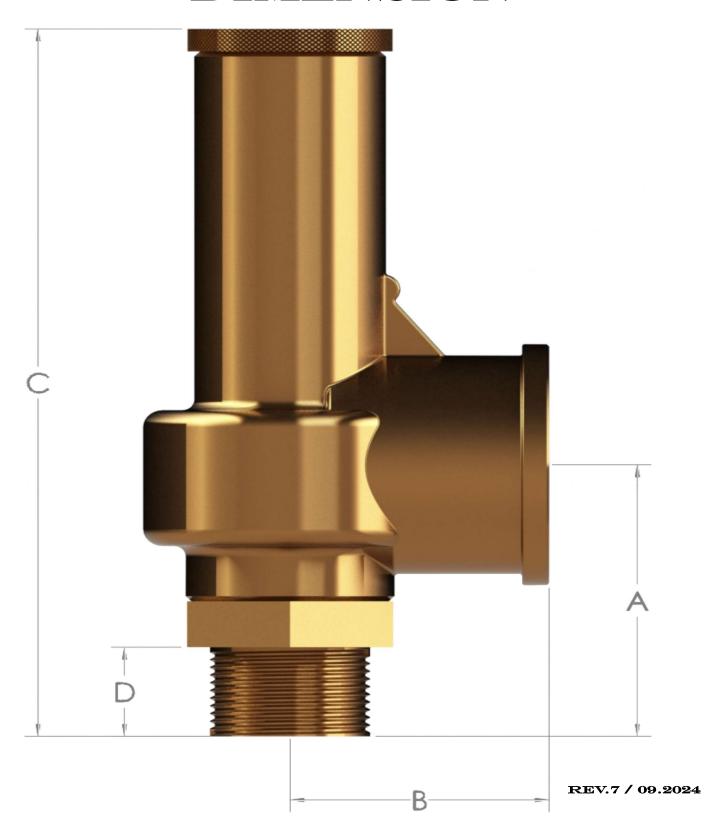




SERIES # 033

MATERIAL OF CONSTRUCTION

	PART LIST	MODEL # 033 NON-FERROUS MATERIAL CONSTRUCTION
SR.NO.	DESCRIPTION	TEMPERATURE -20*C TO 200*C
01	BODY	GUN METAL (IS 318 GR.LTB2)
02	NOZZLE	BRASS (IS 319 GR.1)
03	PISTON / DISC	BRASS (IS 319 GR.1)
04	SPRING (ZINC COATED)	SPRING STEEL (IS 4454 GR.III)
05	CAP	BRASS (IS 319 GR.1)
06	SETTING SCREW	BRASS (IS 319 GR.1)
07	SEAT	VITON / SILICON RUBBER
08	DISC WASHER	BRASS (IS 319 GR.1)
09	RETAINER (ZINC COATED)	HIGH TENSILE SCREW
10	"O RING"	NITRILE RUBBER



SERIES # 033 ASSEMBLY DRAWING

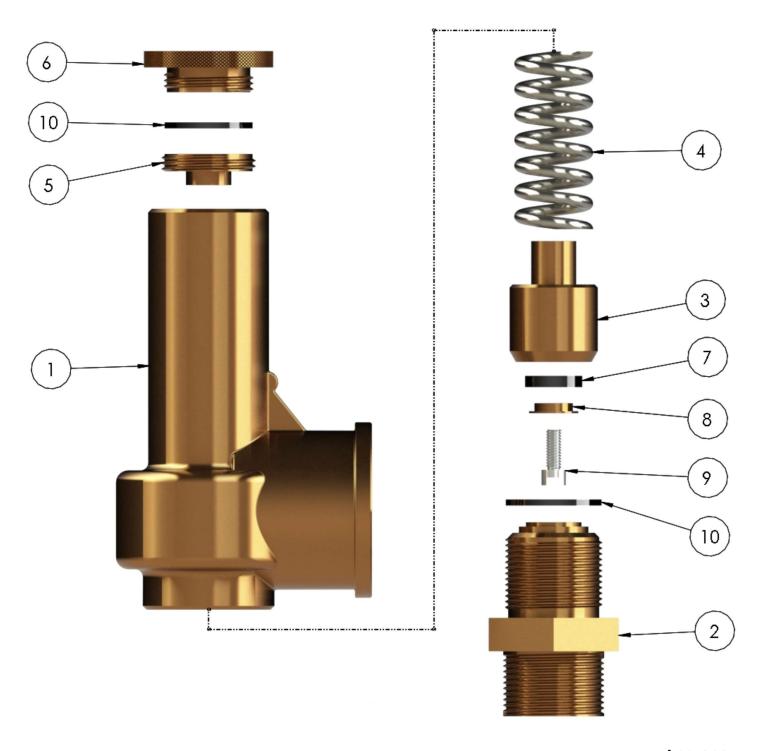



SERIES # 033 TECHNICAL DETAIL

SIZES		ORIFICE (API526 & EN ISO 4126)		MAX SET	A	В	C	D	A / F	APPROX
INLET	OUTLET	DESIGNATIO N & EFFECTIVE AREA (IN2)	ACTUAL AREA IN2 & INLET BRE (MM)	PRESSURE (IN BARG) @ 38*C	ARG) + 5	(MM) ± 5	(MM) ± 5	(MM) ± 2	(MM) ± 2	WEIGHT (KG)
1/2"	1/2"	"D" (0.110)	0.12 (10MM)	35	45	50	120	16	28	0.8
3/4"	1"	"E" (0.196)	0.23 (14MM)	35	52	53	155	21	38	1.5
3/4"	1-1/4"	"E" (0.196)	0.23 (14MM)	35	60	58	165	21	42	2.0
3/4"	1-1/2"	"E" (0.196)	0.23 (14MM)	35	60	58	165	21	42	2.0
1"	1-1/2"	"F" (0.307)	0.35 (17MM)	25	60	58	165	21	42	2.2

NOTE:-

- 1.) SERIES # 033 SAFETY VALVE IS AVAILABLE IN THREAD END CONNECTION ONLY. (BSP, BSPT, ISO7R & NPT OR AS PER CUSTOMER SPECIFICATION)
- 2.) HYDRO TEST IS CONDUCTED FOR NOZZLES AT 1.5 TIMES OF DESIGN PRESSURE OF SAFETY VALVE AS PER API 526, API 598, EN ISO 4126 PART 1 & IS 12992.
- 3.) PNEUMATIC NOZZLE TEST CONDUCT ON 7BARG (100PSIG) AS PER ASME PRESSURE VESSEL SECTION VIII DIVISION.1.
- 4.) SEAT LEAKAGE TEST IS CONDUCTED AS PER API 527 OR AS SPECIFIED.
- 5.) OFFER IN METAL SEAT & RUBBER SEATED DESIGN DEPENDS ON APPLICATION.
- 6.) TECHNICAL DATA SHEET WILL BE PROVIDED ON REQUEST.
- 7.) WE OFFER THIRD PARTY INSPECTION IF REQUIRED.(TUV, LLYODS, BVQI, SGS, ETC.)
- 8.) SAFETY VALVE IS SUPPLIED WITH ONE SET OF TEST CERTIFICATE OF HYDRO TEST, SET PRESSURE TEST & SEAT LEAKAGE TEST.
- 9.) SAFETY VALVE COMES WITH GUARANTEE OF 18MONTHS FROM THE DATE OF SUPPLY


OR 12 MONTHS FROM THE DATE OF INSTALLATION

REV.7 / 09.2024



SERIES # **033**

INSTALLATION DIAGRAM

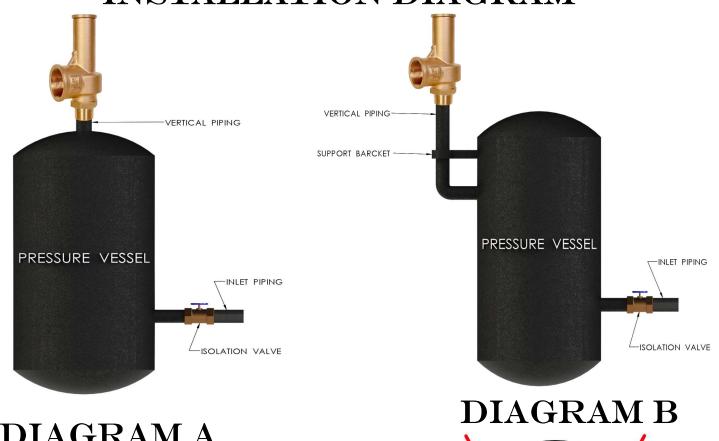

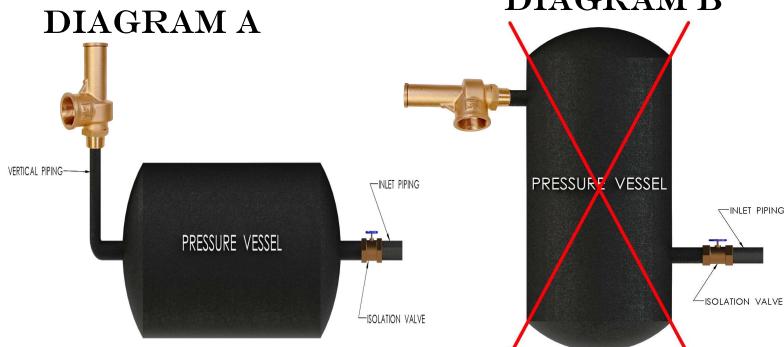


DIAGRAM C


DIAGRAM D



SERIES # 033

SEAT LEAKAGE & BACK PRESSURE TEST

SEAT LEAKAGE

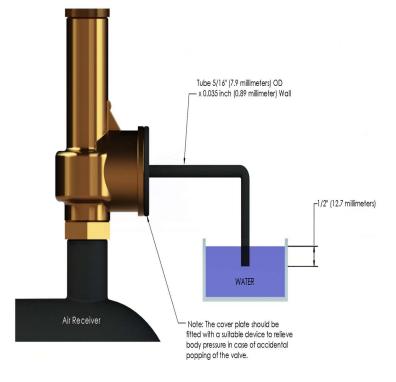


SEAT LEAKAGE ACCEPTANCE CRITERIA AS PER (API 527)

FOR A VALVE WITH METAL SEAT, THE LEAKAGE RATE IN BUBBLES PER MINUTE SHALL NOT EXCEED THE APPROPRIATE VALUE IN BELOW TABLE 1. FOR A SOFT SEATED SAFETY VALVE (RUBBER OR TEFLON), THERE SHALL BE NO LEAKAGE FOR ONE MINUTE (0 BUBBLE / MIN)

TABLE 1

		RIFICE SIZES D SMALLER	EFFECTIVE ORIFICE SIZES LARGER THAN 0.307IN2		
SET PRESSURE	MAX BUBBLE	APPROX LEAKAGE RATE PER 24 HOURS	MAX BUBBLE	APPROX LEAKAGE RATE PER 24 HOURS	
PSIG (BARG)	PER MINUTE	STD. CUBIC FEET	PER MINUTE	STD. CUBIC FEET	
15-1000 (1.03 - 68.9)	40	0.60	20	0.30	
1500 (103.4)	60	0.90	30	0.45	
2000 (137.9)	80	1.20	40	0.60	
2500 (172.4)	100	1.50	50	0.75	
3000 (206.8)	100	1.50	60	0.90	
4000 (275.8)	100	1.50	80	1.20	
5000 (344.8)	100	1.50	100	1.50	
6000 (413.7)	100	1.50	100	1.50	

BACK PRESSURE TEST

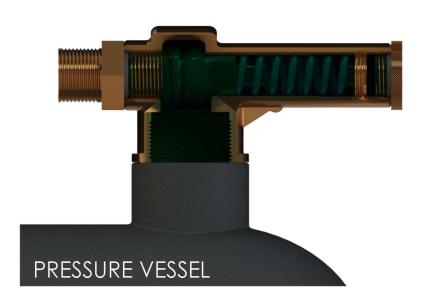

- BACK PRESSURE TEST CONDUCT AT 7KG/CM2G BY AIR OR WATER FLUID AS PER SHOWN DIAGRAM.
- ZERO LEAKAGE ALLOWED.
- CHECK POINT ALL GASKET SEALANT, BODY & CAP.



SERIES # 033

COLD DIFFERENTIAL TEST PRESSURE

WHEN SETTING A VALVE INTENDED FOR USE AT HIGH TEMPERATURE ON A TEST RIG USING A TEST FLUID AT AMBIENT TEMPERATURES, IT IS NECESSARY TO SET THE VALVE AT SLIGHTLY HIGHER PRESSURE, SO THAT IT WILL OPEN AT THE CORRECT SET PRESSURE UNDER OPERATING CONDITIONS. THE NECESSARIES ALLOWANCE IS SHOWN IN THE FOLLOWING TABLE.

OPERATING TEMPERATURE (CENTIGRADE)	OPERATING TEMPERATURE (FAHRENHEIT)	% INCREASE IN SET PRESSURE AT (AMBIENT TEMPERATURE)
UPTO 121 *C	UPTO 250 *F	0 %
122 *C TO 316 *C	251 *F TO 600 *F	1 %
317 *C TO 427 *C	601 *F TO 800 *F	2 %
428 *C TO 538 *C	801 *F TO 1000 *F	3 %



SERIES # 033 MARKING DETAIL

EVERY SAFETY VALVE IS LASER MARKED ACCORDING TO ABOVE LABEL

LASER MARKING DETAIL

LINE NO. 01 = MANUFACTURER NAME AND LOGO

LINE NO. 02 = PART # / MODEL #

LINE NO. 03 = INLET X OUTLET SIZE & THREAD END TYPE

LINE NO. 04 = DATE OF MFG & SET PRESSURE

LINE NO. 05 = WORKING TEMP. RANGE & UNIQUE SR.NO.

LINE NO. 06 = OVER PRESSURE & FLOW RATE



SERIES # 033 AIR CAPACITY TABLE

Air Capacities in SCFM @ 15*C & 10% Over Pressure (API 520)						
	ORIFICE AREA IN2 (MM2) & DISCHARGE CAPACITY IN SCFM					
SET PRESSURE (BARG)	"D"	"E"	«F"			
(21213)	0.12in2 (77.42mm2)	0.23in2 (148.39mm2)	0.35in2 (225.81mm2)			
1	59	113	172			
2	90	173	263			
3	121	232	352			
4	151	291	442			
5	182	350	532			
6	213	409	622			
7	244	469	712			
8	274	528	803			
9	305	587	893			
10	336	646	983			
11	367	705	1072			
12	397	764	1163			
13	428	823	1253			
14	459	883	1343			
15	490	942	1433			
16	520	1001	1523			
17	551	1060	1613			
18	582	1119	1703			
19	613	1178	1793			
20	643	1238	1883			
21	674	1297	1973			
22	705	1355	2063			
23	736	1414	2153			
24	766	1474	2243			
25	797	1533	2333			
26	828	1587	2415			
27	859	1646	2505			
28	890	1705	2594			
29	920	1764	2684			
30	951	1823	2774			
31	982	1882	2863			
32	1013	1941	2953			
33	1043	2000	3042			
34	1074	2059	3133			
35	1105	2118	3222			

NOTE:-

1.) CAPACITIES BELOW 2BARG SET PRESSURE ARE CALCULATED AT 0.2BAR OVER PRESSURE.

REV.7 / 09.2024



SERIES # 033 WATER CAPACITY TABLE

WATER CAPACITIES IN LITRES PER MINUTE (LPM) @ 20*C & 10% OVER PRESSURE (API 520)					
	ORIFICE AREA IN2 (MM2) & DISCHARGE CAPACITY IN LPM				
SET PRESSURE (BARG)	"D"	"Е"	«F.»		
,	0.12in2 (77.42mm2)	0.23in2 (148.39mm2)	0.35in2 (225.81mm2)		
1	46	87	133		
2	65	124	188		
3	79	152	230		
4	91	175	266		
5	102	196	297		
6	112	214	325		
7	121	231	352		
8	129	247	376		
9	137	262	399		
10	144	277	421		
11	151	290	441		
12	158	303	461		
13	165	315	480		
14	171	327	498		
15	177	339	515		
16	183	350	532		
17	188	361	548		
18	194	371	564		
19	199	381	580		
20	204	391	595		
21	209	401	610		
22	214	410	624		
23	219	420	638		
24	224	429	651		
25	228	437	665		
26	233	446	678		
27	237	455	691		
28	241	463	704		
29	246	471	716		
30	250	479	729		
31	254	487	740		
32	258	495	752		
33	262	502	764		
34	266	510	776		
35	270	517	787		

NOTE:-

1.) CAPACITIES BELOW 2BARG SET PRESSURE ARE CALCULATED AT 0.2BAR OVER PRESSURE.

REV.7 / 09.2024



SERIES # 033 AIR CAPACITY TABLE

Air Capacities in KG/HR @ 15*C & 10% Over Pressure (ISO 4126 PART 1)						
	ORIFICE AREA IN2 (MM2) & DISCHARGE CAPACITY IN KG/HR					
SET PRESSURE (BARG)	"D"	"E"	"F»			
	0.12in2 (77.42mm2)	0.23in2 (148.39mm2)	0.35in2 (225.81mm2)			
1	123	236	359			
2	187	358	545			
3	251	481	732			
4	315	604	919			
5	379	726	1105			
6	443	849	1292			
7	507	972	1479			
8	571	1094	1665			
9	635	1217	1852			
10	699	1340	2038			
11	763	1462	2225			
12	827	1585	2412			
13	891	1708	2598			
14	955	1830	2785			
15	1019	1953	2972			
16	1083	2076	3158			
17	1147	2198	3345			
18	1211	2321	3532			
19	1275	2444	3718			
20	1339	2566	3905			
21	1403	2689	4092			
22	1467	2812	4278			
23	1531	2934	4465			
24	1595	3057	4652			
25	1659	3180	4838			
26	1723	3302	5025			
27	1787	3425	5212			
28	1851	3548	5398			
29	1915	3670	5585			
30	1979	3793	5772			
31	2043	3916	5958			
32	2107	4038	6145			
33	2171	4161	6332			
34	2235	4284	6518			
35	2299	4406	6705			

NOTE:-

1.) CAPACITIES BELOW 2BARG SET PRESSURE ARE CALCULATED AT 0.2BAR OVER PRESSURE.

REV.7 / 09.2024



SERIES # 033 WATER CAPACITY TABLE

WATER CAPACITIES IN KG/HR @ 20*C & 10% OVER PRESSURE (ISO 4126 PART.1)					
	ORIFICE AREA IN2 (MM2) & DISCHARGE CAPACITY IN KG/HR				
SET PRESSURE (BARG)	"D"	"E"	«F"		
,	0.12in2 (77.42mm2)	0.23in2 (148.39mm2)	0.35in2 (225.81mm2)		
1	2720	5213	7933		
2	3846	7372	11218		
3	4711	9029	13740		
4	5439	10426	15865		
5	6082	11656	17738		
6	6662	12769	19431		
7	7196	13792	20988		
8	7693	14744	22437		
9	8159	15639	23798		
10	8601	16485	25085		
11	9020	17289	26310		
12	9421	18058	27479		
13	9806	18795	28602		
14	10176	19505	29681		
15	10533	20189	30723		
16	10879	20852	31731		
17	11214	21493	32707		
18	11539	22116	33655		
19	11855	22722	34578		
20	12163	23313	35476		
21	12463	23888	36352		
22	12757	24451	37207		
23	13043	25000	38044		
24	13324	25538	38862		
25	13599	26064	39663		
26	13868	26581	40449		
27	14132	27087	41219		
28	14391	27584	41976		
29	14646	28072	42719		
30	14897	28552	43449		
31	15143	29024	44167		
32	15385	29489	44874		
33	15624	29946	45570		
34	15859	30396	46255		
35	16090	30840	46930		

NOTE : -

REV.7 / 09.2024

1.) CAPACITIES BELOW 2BARG SET PRESSURE ARE CALCULATED AT 0.2BAR OVER PRESSURE.



SERIES # 033 INSTALLATION & PRESSURE ADJUSTMENT GUIDELINE

1.) INSTALLATION GUIDELINE:-

- SAFETY VALVES SHOULD BE ALWAYS MOUNTED VERTICALLY ON THE PRESSURE VESSEL, BOILERS OR PIPELINE.
- ALL THE PACKING MATERIALS SHOULD BE REMOVED FROM THE VALVE CONNECTION PRIOR TO INSTALLATION.
- NEVER LIFT VALVE FROM ITS HANDLE OR LEVER, IT DAMAGES THE SPINDLE ALIGNMENT WHICH RESULTS IN MALFUNCTION OR NOT WORK AT ALL.
- IF SAFETY VALVE ONCE REACHED THE SITE AND ITS NOT GOING TO USE RIGHT AWAY THEN IT HAS TO STORE IN DRY, & FREE OF DIRT AND SHOULD MAINTAIN THE STORAGE TEMPERATURE -20*CTO 50*C. AND PROTECTIVE SHOULD NOT BE REMOVED WHEN IT IS NOT IN USE.
- WHILE INSTALLING SAFETY VALVE USE METAL OR PLASTIC SEAL WASHER ONLY. TEMPORARY SEAL MATERIAL SUCH AS PTFE / TEFLON TAPE OR LIQUID SEAL MATERIAL SHOULD NOT BE USED AS THIS TYPE OF MATERIAL BREAK OFF AND ENTER THE SAFETY VALVE AND DAMAGES THE SEAT OF VALVE WHICH RESULTS IN CONTINUOS LEAKAGE.

2.) INSTALLATION ON PRESSURE VESSELS:-

- WHEN FITTING A SAFETY VALVE ONTO PRESSURE VESSELS, THE INLET CONNECTION PIPE SHOULD BE AS SHORT AS POSSIBLE AND THE BORE SHOULD BE AT LEAST EQUIVALENT TO THE NOMINAL BORE SIZE OF THE VALVE. SO THAT THE PRESSURE DROP BETWEEN THE VESSELAND THE VALVE SHOULD BE NO MORE THAN 3% RATED CAPACITY.
- IT IS ESSENTIAL THAT NEW INSTALLATIONS ARE FULLY FLUSHED AND ALL DEBRIS AND FOREIGN PARTICLES REMOVED PRIOR TO INSTALLING THE VALVE AS SERIOUS DAMAGE CAN BE CAUSED TO THE VALVE SEATS RESULTING IN SUBSEQUENT LEAKAGE AND MALFUNCTION.
- THERE SHALL BE NO INTERVENING STOP VALVES BETWEEN THE VESSELAND SAFETY VALVES.

3.) INSTALLATION ON PIPELINES:-

WHEN FITTING A SAFETY VALVE INTO A PIPELINE, THE INLET CONNECTING PIPE LEADING FROM THE MAIN PIPELINE TO THE SAFETY VALVE SHOULD BE AS SHORT AS POSSIBLE, SO THAT THE INLET PRESSURE DROP IS NO MORE THAN 3% OF RATED CAPACITY.

4.) PRESSURE ADJUSTMENT GUIDELINE:-

EVERY VALVE IS FITTED WITH A SUITABLE SPRING AND TESTED BEFORE LEAVING THE FACTORY. SAFETY VALVES CAN BE PRESET ON REQUEST BUT TO ALTER THE SET PRESSURE, THE ADJUSTING SCREW, WHEN VIEWED FROM THE TOP, SHOULD BE SCREWED DOWNWARDS IN A CLOCKWISE DIRECTION TO INCREASE THE SET PRESSURE AND UPWARDS IN AN ANTI-CLOCK WISE DIRECTION TO DECREASE IT. SET PRESSURE ADJUSTMENT MUST BE CARRIED OUT BE EXPERIENCED AND APPROVED PERSONNEL. ANY CHANGE IN SET PRESSURE MUST BE WITHIN THE RANGE OF EXISTING SPRING, IF IT EXCEEDS THE RANGE, A NEW SPRING WILL BE REQUIRED.

5.) BLOW-DOWNADJUSTMENT:-

 $BLOWDOWN\,CAN'TBE\,ALTER, IT IS\,FIXED\,BLOW\,DOWN\,DESIGN.\,BLOW\,DOWN\,WILL\,BE\,BETWEEN\,7\,TO\,10\%\,OF\,SET\,PRESSURE.$

6.) SERVICE, MAINTENANCE & CALIBRATION:-

- A SET PRESSURE FUNCTION TEST SHOULD BE CARRIED OUT AT LEAST ONCE A YEAR. THE DETAILED TEST PROCEDURE IS DETERMINED BY THE USER.
- $\bullet \quad \mathsf{SAFETYVALVE}\,\mathsf{REQUIRES}\,\mathsf{REGULAR}\,\mathsf{MAINTENANCE}\,\mathsf{AND}\,\mathsf{CALIBRATION}\,\mathsf{ONCE}\,\mathsf{AYEAR}.$

7.) DISMANTLINGTHE VALVE:-

THE FOLLOWING POINTS MUST BE OBSERVED BEFORE DISMANTLING SAFETY VALVES:-

- THERE WOULD BE NO PRESSURE IN SYSTEM OR VESSEL BEFORE REMOVING SAFETY VALVE.
- MEDIUM OR APPLICATION MUST BE COOL & COMPLETELY DRAIN FROM VESSEL OR PIPELINE.
- ASSEMBLY WORK MUST BE CARRIED BY QUALIFIED PERSONNEL.

8.) REPAIRS:-

REPAIRS ON SAFETY VALVES CAN ONLY BE CARRIED BY AUTHORIZED PERSONNEL OR BY HARSHAD ENGINEERING WORKS.



HARSHAD ENGINEERING WORKS SAFETY VALVE



SERIES # 033 WARRANTY POLICY

HARSHAD ENGINEERING WORKS (HEW) HEREBY WARRANTS THAT THE GOODS DELIVERED UNDER CONTRACT WILL BE FREE FROM DEFECT IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF 18MONTHS FROM SHIPMENT OR 12 MONTHS FROM INSTALLATION WHICHEVER IS EARLIER. WITHIN THIS PERIOD, ANY OF OUR PRODUCTS CLAIMED DEFECTIVE MAY BE RETURNED TO OUR FACTORY IN AHMEDABAD, INDIA AFTER WRITTEN NOTIFICATION TO AND AUTHORIZATION BY US, AND IF FOUND TO BE DEFECTIVE AFTER EXAMINATION BY US, THE PRODUCT WILL BE REPAIRED OR REPLACED FREE OF CHARGE. SUCH DEFECTS SHALL BE EXCLUSIVE OF THE EFFECTS OF CORROSION, EROSION, NORMAL WEAR OR IMPROPER HANDLING OR STORAGE. AFTER EXAMINATION IF IT IS MANUFACTURING DEFECT FREIGHT CHARGES INWARD AND OUTWARD WILL BE BORNE BY US.

HEW MAKES NO REPRESENTATION, WARRANTY OR GUARANTEE, EXPRESS OR IMPLIED, WITH REGARD TO OUR PRODUCTS EXCEPT AS SPECIFICALLY STATED. WHEN IN DOUBT AS TO THE PROPER APPLICATION OF AN PARTICULAR PRODUCT, YOU ARE INVITED TO CONTACT HEW OFFICE AT ANY TIME. WE CANNOT OTHERWISE BE RESPONSIBLE FOR THE SELECTION OF UNSUITABLE EQUIPMENT. SUITABILITY OF THE MATERIAL AND PRODUCT FOR THE USE CONTEMPLATED BY THE BUYER SHALL BE THE SOLE RESPONSIBILITY OF THE BUYER.

EXCEPT AS SPECIFICALLY SET FORTH ABOVE AND FOR WARRANTY OF TITLE, HEW MAKES NO WARRANTY, EXPRESS OR IMPLIED, OF ANY KIND INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IF SEAL IS FOUND IN BROKEN CONDITIONS DURING EXAMINATION HEW WILL CONSIDERED THAT THE PRODUCT IS BEEN TEMPERED AND IT WON'T TAKE ANY RESPONSIBILITY OF MANUFACTURING OR WORKMANSHIP OR PERFORMANCE OF THE SAFETY VALVE.

MANUFACTURING WARRANTY WILL EXPIRE RIGHT AWAY.

IN NO EVENT WILL HEW BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES

SAFETY VALVE IS SAFETY RELATED COMPONENT INTENDED FOR USE IN CRITICAL APPLICATIONS. THE IMPROPER APPLICATION, INSTALLATION OR MAINTENANCE OF THE PRODUCT OR USE OF PARTS OR COMPONENTS NOT MANUFACTURED BY HEW MAY RESULT IN A FAILURE OF THE PRODUCT. THE ADVICE OF QUALIFIED ENGINEER SHOULD BE SOUGHT PRIOR TO ANY USE OF PRODUCT.

ANY INSTALLATION, MAINTENANCE, PRESSURE ADJUSTMENT, REPAIR OR TEST PERFORMED ON THE PRODUCT MUST BE DONE IN ACCORDANCE WITH THE REQUIREMENTS PF ALL APPLICABLE CODES AND STANDARDS.

THE INFORMATION, SPECIFICATIONS AND TECHNICAL DATA CONTAINED IN THIS DOCUMENT ARE SUBJECT TO CHANGE WITHOUT NOTICE. HEW DOES NOT WARRANT THAT THE SPECIFICATIONS ARE CURRENT AND ASSUMES NO RESPONSIBILITY FOR THE USE OR MISUSE THEREOF. THE PURCHASER SHOULD VERIFY THAT THERE HAVE BEEN NO CHANGES TO THE SPECIFICATIONS PRIOR TO USE.